Register your product and get support at

www.philips.com/welcome

HP4940

PHILIPS

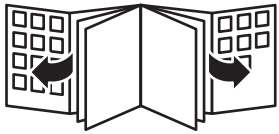

1

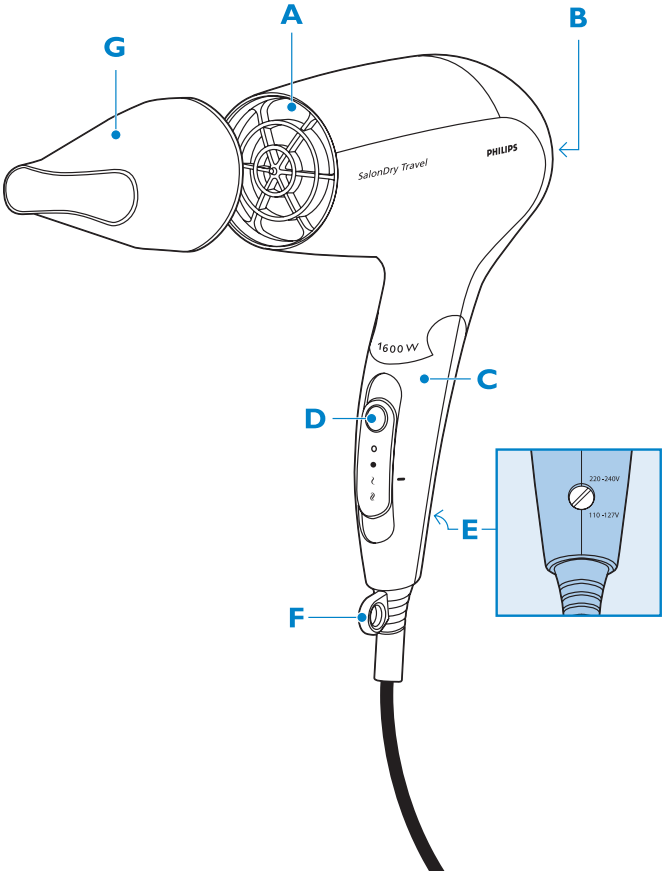

ENGLISH 6
INDONESIA 11
한국어 17
BAHASA MELAYU 23
ภาษาไทย 29
TIẾNG VIỆT 33
繁體中文 39
简体中文 44

HP4940

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.
This new hairdryer has been specially designed to offer you comfortable and reliable drying at home or while travelling. It has a compact and lightweight design, making it easy to use. Its airflow dries your hair quickly, giving it the lustre, body and richness you love.

General description (Fig. 1)

A Air outlet grille
B Air inlet grille
C Foldable handle
D Slide switch with 3 heat/speed settings and off position
- : Strong airflow for fast drying
- : Gentle airflow to protect damp hair from becoming too dry.
- ●: Cool airflow to set your style
- 0: Off

E Dual voltage switch
F Hanging loop
G Concentrator

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Keep the appliance away from water. Do not use it near or over water contained in baths, washbasins, sinks etc. When you use the appliance in a bathroom, unplug it after use. The proximity of water presents a risk, even when the appliance is switched off.
- Do not insert metal objects into the air grilles to avoid electric shock.

Warning

- Check if the dual voltage switch has been set to the local mains voltage before you connect the appliance.

- Check the condition of the mains cord regularly. Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

Caution

- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Never block the air grilles.
- If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance back on, check the grilles to make sure they are not blocked by fluff, hair, etc.
- Always switch off the appliance before you put it down, even if it is only for a moment.
- Do not use the appliance on artificial hair.
- Do not use the appliance for any other purposes than intended.
- Always unplug the appliance after use.
- Do not wind the mains cord round the appliance.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the

instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

Using the appliance

1 Check if the dual voltage switch (on the bottom back part of the handle) has been set to the local mains voltage before you connect the appliance. You can adjust the position of the dual voltage switch with a screwdriver or coin (Fig. 2).

2 Put the plug in the wall socket.

3 Select the desired setting to switch on the appliance: (Fig. 3)
- ⁑: Strong airflow for fast drying.
- ≀: Gentle airflow to protect damp hair from becoming too dry.
- ●: Cool airflow to set your style.
- 0: Off.

4 To dry your hair, make brushing movements with the hairdryer at a small distance from the hair.

Concentrator

The concentrator enables you to direct the airflow at the brush or comb with which you are styling your hair.

1 To connect the concentrator, simply snap it onto the appliance.

2 To disconnect the concentrator, pull it off the appliance (Fig. 4).

Cleaning

Never rinse the appliance with water.

1 Switch off the appliance and unplug it.

2 Clean the appliance with a dry cloth.

3 Before you clean the concentrator, remove it from the appliance.

4 Clean the concentrator with a moist cloth or rinse it under the tap. Make sure the concentrator is dry before you use or store it.

Storage

Never put the appliance down on one of its air grilles. Always put it on one of its sides.

Do not wind the mains cord round the appliance.

1. Switch off the appliance and unplug it.
2. Put the appliance in a safe place and let it cool down.
3. Store the appliance in a dry place out of the reach of children.
4. To fold the handle apply soft pressure on the backside of the handle until it folds.
5. For easy storage, hang the appliance from its hanging loop (Fig. 5).

Environment

- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment (Fig. 6).

Guarantee & service

If you need information or if you have a problem, please visit the Philips website at **www.philips.com** or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet). If there is no Customer Care Centre in your country, go to your local Philips dealer or contact the Service Department of Philips Domestic Appliances and Personal Care BV.

Troubleshooting

If problems arise with your hairdryer and you cannot solve them with the information below, please contact the nearest Philips service centre or the Philips Customer Care Centre in your country.

Problem	Cause	Solution
The appliance does not work at all.	Perhaps the socket to which the appliance has been connected is not live.	Make sure the socket is live.
	The appliance may have overheated and switched itself off.	Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc.
	The appliance may not be suitable for the voltage to which it has been connected.	Make sure that the voltage indicated on the type plate of the appliance corresponds to the local mains voltage.
	The mains cord of the appliance may be damaged.	If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
	The appliance may not be suitable for the voltage to which it has been connected	Make sure that the voltage indicated on the appliance corresponds to the local mains voltage.If necessary adjust the position of the dual voltage switch with a screwdriver or coin.

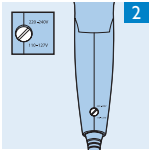
2

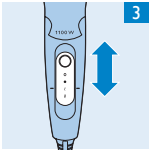
3
1100 W

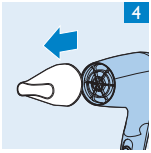
4

5

6

100% recycled paper
100% papier recyclé

www.philips.com

4222.002.7027.3